

REINER

speed-i-Jet 798

Ⓜ Short instruction

1 Insert the batteries on *speed-i-Jet*

2 Open the roof panel



3 Insert the inkjet cartridge




4 Insert CD into CD-ROM drive and start the installation (requires admin rights)

5 Start *speed-i-Jet 798 PCset*

6 Connect *speed-i-Jet 798* to the PC

7 Input text (a), following drag the block of text to the print line (b) and transfer it to *speed-i-Jet 798* (c)

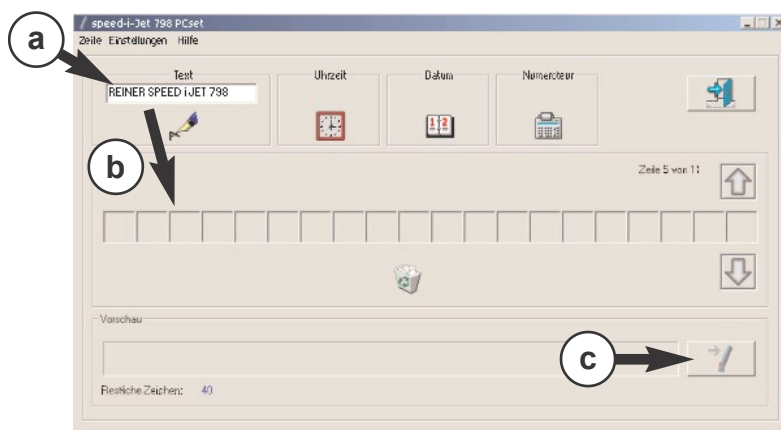

8 Disconnect *speed-i-Jet* and PC

9 Print

